

Polycarbonate Enclosure Mounting Feet Installation Guide



Ventev's enclosures are intended for indoor OR outdoor use and are commonly used in harsh environments. These enclosures protect WLAN equipment from damage caused by inclement weather and tampering. Proper mounting of the enclosure is essential in ensuring safety and reliability of your network. Below is a simple guide demonstrating the step by step installation process utilizing mounting feet and a polycarbonate enclosure.

Mounting Kit Includes:

- Mounting Feet (4)
- Mounting Bolts (4)


Additional Components Needed:

- Polycarbonate Enclosure
- Phillips Screwdriver
- Mounting Feet Kit



INSTALLATION INSTRUCTIONS

1. Place mounting feet on the back of the enclosure (Figure 1). The square pegs on the back of the enclosure will fit into the square recesses on the mounting feet, exposing the brass insert.
2. Using the bolts provided, secure the feet to the back of the enclosure. The feet can be installed horizontally (Figure 2) or vertically (Figure 3). Tighten, but do not over torque, the bolts using a Phillips screwdriver. **No power tools should be used.**
3. Once all feet are installed on the back of the enclosure (Figure 4), it is ready to be easily mounted to a flat surface (Figures 5 & 6).

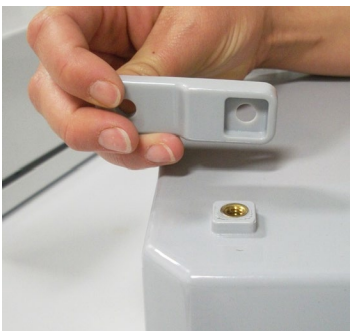

Placement of Mounting Feet
Figure 1




Horizontal Feet
Figure 2



Vertical Feet
Figure 3



Finished Enclosure
Figure 4

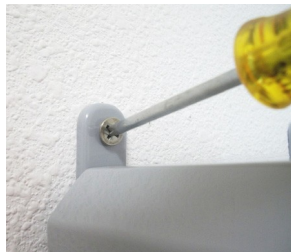

Mounting to Wall
Figure 5



Mounted Solution
Figure 6